



0 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170 180 190 200 210 220 230

DECCA Alignment Protractor

a = 60.5 mm



Vono Labs GmbH
Internet: www.vono.ch

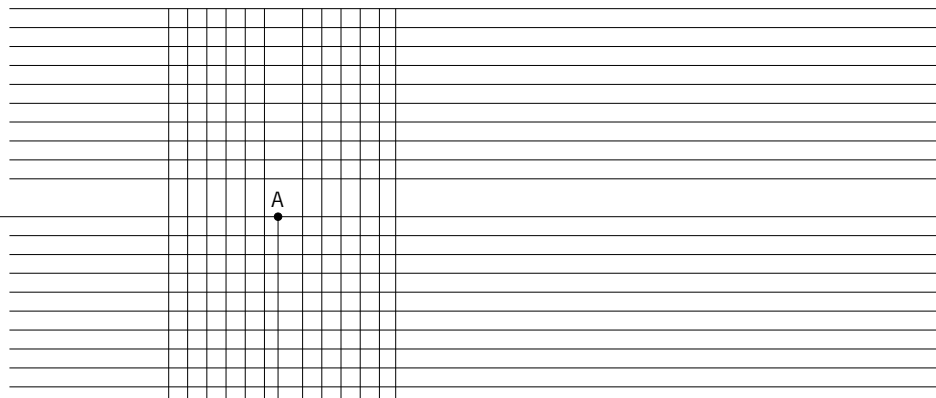

INSTRUCTIONS FOR USE

Place the 9/32" (7.14375 mm) hole over the turntable centre spindle. Make a pin prick at the centre of point **A** and rest the stylus at this point. Slide the cartridge in the head shell until the sides of the head shell are parallel with the lines. Tighten up the fixing screws to secure the cartridge.

turntable centre

DECCA ffss INTERNATIONAL ARM

Template



8 3/8" (212.725 mm)

Z